




WARNING: Observe these instructions to avoid personal injury and damage to property. NEVER leave a burning fire unattended. HOT burn risk.

**Please carefully read and follow these instructions to assemble your unit.
Please retain these instructions for future use**

Images are only an indication of the general appearance and design. Specific aspects may change from time to time.

USER ASSEMBLY INSTRUCTIONS

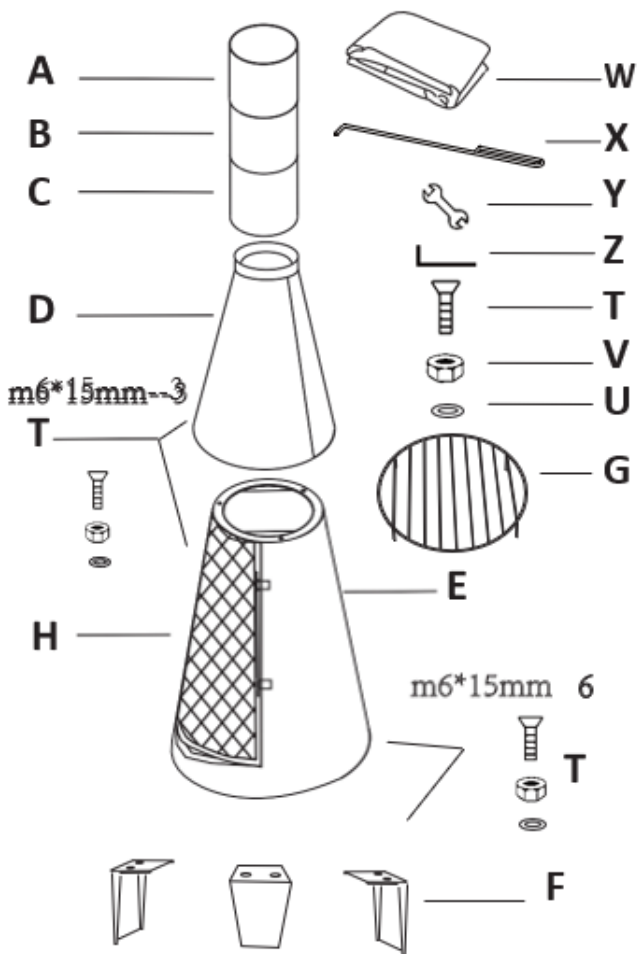

| NO. | Parts | Qty. |
|-----|-----------------------|------|
| A | Top flue (same as C) | 1 |
| B | Decorated flue | 1 |
| C | Base flue (same as A) | 1 |
| D | Top body | 1 |
| E | Mesh body | 1 |
| F | Legs | 3 |
| G | Log Grate | 1 |
| H | Mesh door | 1 |
| T | Bolts (m6*15mm) | 9 |
| U | Washer | 9 |
| V | Nut | 9 |
| W | Chimenea cover | 1 |
| X | Poker | 1 |
| Y | Hex Spanner | 1 |
| Z | Hex Key | 1 |



USER ASSEMBLY INSTRUCTIONS

A hex key and spanner have been provided to assist with assembly.

TIP: Hand tighten all bolts first, then use hex key and spanner to tighten fully.

We recommend wearing gloves during assembly to prevent injuries from sharp edges.

Step 1:

Assemble the Legs (F) to Mesh Body (E) with 6 x Bolts (T), 6 x Washers (U), 6 x Nuts (V).



Step 2:

Attach the Mesh door (H) to Mesh Body (E).





USER ASSEMBLY INSTRUCTIONS

Step 3:

Assemble the Top body (D) to Mesh Body (E) with 3 x Bolts (T), 3 x Washers (U), 3 x Nuts (V).

a. Line up the holes on the Top body (D) with the holes on the Mesh Body (E)


b. Ensure the rear weld marks from the Top Body (D) and Mesh Body (E) align



Step 4:

Place Top Flue (A), Decorated Flue (B), Base Flue (C) on Top Body (D).

Ensure the rear weld marks from Top Flue (A), Decorated Flue (B), Base Flue (C) align with those on Top Body (D).

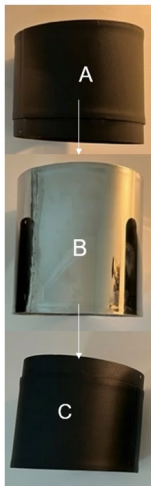



USER ASSEMBLY INSTRUCTIONS

Step 5:

Put Log grate (G) into Mesh Body (E).



Fully Assembled

Set up on a flat surface, ensure your chimenea is positioned on a level surface and positioned at least 2 metres distance from any side or overhead combustible materials. E.g., house, fence, deck, trees, etc.





SPECIFIC INSTRUCTIONS FOR YOUR CHIMENEA *cont...*

Please read the following instructions and recommendations. Exercise CAUTION at all times for the safe enjoyment of a Chimenea. Please keep these instructions in a safe place so you can read them again from time to time.

- ALWAYS FOLLOW THE USER INSTRUCTIONS Failure to do so may result in personal injury or fires spreading to property. Please remember you are dealing with a real fire.
- PLACE your Chimenea on a FLAT surface; you should NOT place it on a sloping surface where it might tip over.
- This should be a NON-FLAMMABLE surface such as stone, gravel or bricks. Do not place it on grass which may turn brown. Do not place on wood which may turn brown or catch fire. DO NOT PLACE on decking which may turn brown or catch fire.
- DO NOT place your Chimenea near bushes or plants or under trees; the heat will damage the leaves and is a fire risk.
- DO NOT place your Chimenea under an awning; it will burn or melt.
- DO NOT place your Chimenea near garden furniture, specially made of fabric or woven plastic, which may melt or catch fire. We recommend at least one-meter minimum distance.
- DO NOT make a real fire inside a conservatory, summer house or garden shed. Chimeneas burning wood, coal or charcoal can only be used outside, because fumes and gases from the fire are poisonous and dangerous to health. Carbon monoxide gas has no colour nor odor and is deadly.
- DO NOT touch the Chimenea when burning, the surface is hot, and you will burn your fingers. We recommend that gloves are used at all times.
- DO NOT allow pets near the fire.
- DO NOT allow children, especially small children to play or run around the fire.
- DO NOT over fuel the Chimenea. If flames are coming out of the top of the Chimenea, then the fire is too large!
- DO NOT PANIC if fuel falls out of the Chimenea or for any reason flames spread out from the fire, simply extinguish spreading flames with earth, sand or water. DO NOT throw water on a real fire other than in an extreme emergency.
- DO NOT use petrol, paraffin or fire lighters to start the fire (or as fuel). The best method is balled newspaper and dry kindling. The best fuel is wood or charcoal.
- NEVER LEAVE A BURNING CHIMENEA UNATTENDED. Failure to do so may result in the fire spreading out of control and damage or destruction of property. Please ensure the fire is completely out before leaving the Chimenea unattended.
- DO NOT attempt to move any real Chimenea fire while the fire is burning.
- We advise against using a real Chimenea fire when it is windy. Strong wind may tip over the Chimenea which is a fire risk. Wind may disperse burning material, which is a fire risk, particularly if the surroundings are very dry.
- PLEASE be a good neighbour and be reasonable in the use of your Chimenea fire, keep smoke and noise to a minimum.



SPECIFIC INSTRUCTIONS FOR YOUR CHIMENEA *cont...*

First Time Use:


Curing, or firing as it is sometimes referred to as, is an important step that is often overlooked.

What you'll need:

- Kindling



- Fire Starters & Matches

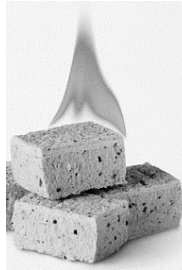

- Firewood



1. Put the grate inside the chimenea and ensure the top flue is open.
2. Build an even base of kindling & light using fire starters.

3. Supervise it to burn for an hour.



4. Add firewood, before things cool down, using larger chunks of wood. Let it burn for an hour.



5. Then let the chimenea cool down. NEVER use water to put your chimenea out. The shock of the temperature change can cause cracking.



SPECIFIC INSTRUCTIONS FOR YOUR CHIMENEA *cont...*

Care and Maintenance

Allow the fire pit to cool before cleaning. Always empty the residual ash after each use.

To extend the life of your chimenea, protect it from the elements when not in use.

The use of harsh, chemical cleaners or rough scourers can severely damage the external surfaces of your fire pit. Only use soap and water during cleaning and allow the surfaces to dry after cleaning to prevent corrosion.

Do not clean this fire chimenea with a high-pressure washer or steam cleaner.

Rust Prevention

Where fire and steel interact, rust will eventually appear due to the extreme heat of the fire. If you want to minimise rust in your chimenea, you may use a light oil or rust preventative spray to reduce rusting when the fire pit not in use however, these oils and sprays are flammable so any oil or rust preventative spray must be cleaned off before the next use.